

SYDNEY ID WALLET

Supplies:

9" x 12" Cork or scraps (not compatible with cotton/fraying fabrics)

4" plastic or nylon zipper

4 ¼" x 3" clear vinyl for ID window, 16ga.

Non-fusible ¼" wide tape

Basic sewing supplies

Optional – Snap closure & ½" swivel hook

*Please note: I didn't designate height & width as I normally do because it can be confusing with this type of project. Please refer to diagram & video if using a directional print!

Cutting:

A 4 ½" x 8" Base

B 4 ½" x 3 ¼" ID window

C 4" x 3" Back of ID window/pocket


D 4" x 2 ¾" Base of credit card pockets

E 3" x 2 ¾" credit card pockets – CUT 2

Optional:

F 3" x ¾" for snap tab – CUT 2

G 3" x ½" for swivel hook

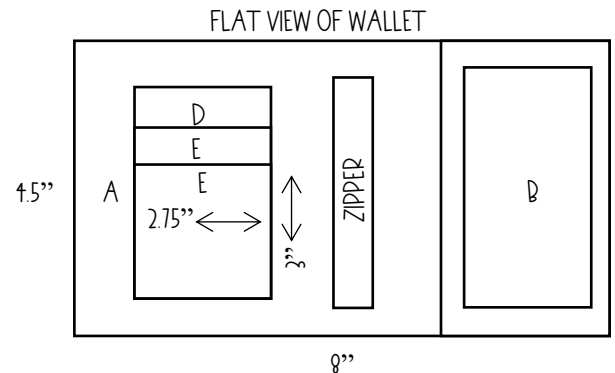

Basic order of steps (See FREE video tutorial on YouTube for complete instructions!)

1. Draw & cut zippered opening (A), centered, 3 ¾" from each end, ½" from each long side. Place zipper with non-fusible tape, stitch 1/8" around.
2. Draw & cut ID window (B). Use tape to place clear vinyl. Topstitch B & C tops only and top of window. Place B & C together (roughly center C), sew sides and bottom of window.
3. Topstitch both E pieces, one short side each. Place one E ½" from bottom of D. Sew ¼". Place second E, align with bottom of D. Sew 1/8" across top of pocket.
4. OPTIONAL: Sew F pieces wrong sides together 1/8". Add snap closure with rivet setter. Fold over G on ½" swivel. Stitch or add rivet.
5. Place pockets (and snap closure/hook) together and sew around 1/8".